PARTS LIST:

QWIK-FENCE BACK PANEL
FOR PALLET RACK
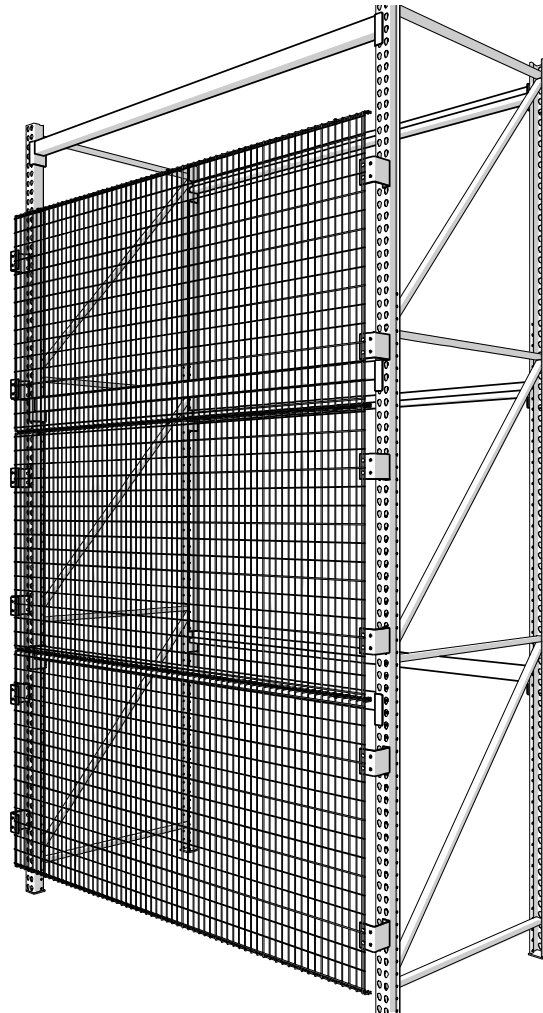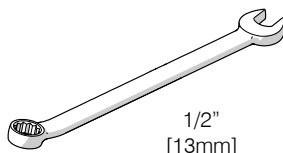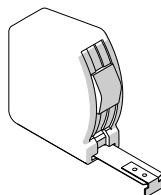*(SIZE AND QTY. VARY)*

HARDWARE KIT
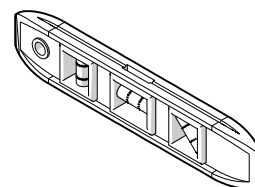*(FOR QWIK-FENCE BACK PANEL FOR
PALLET RACK INSTALLATION)*

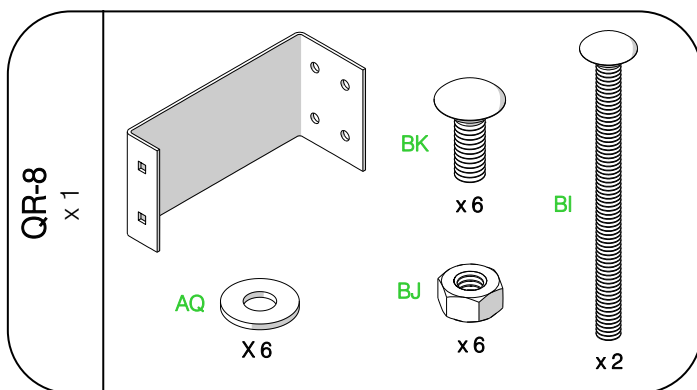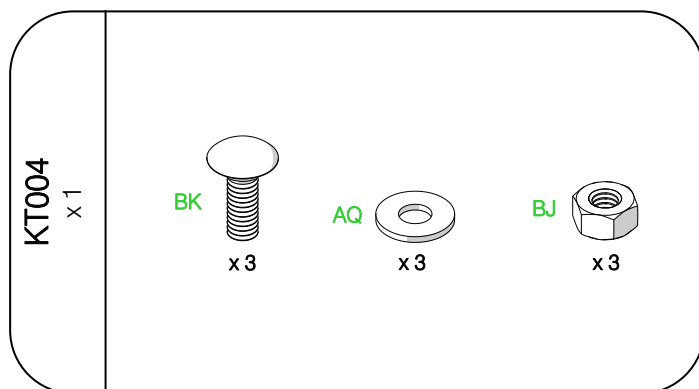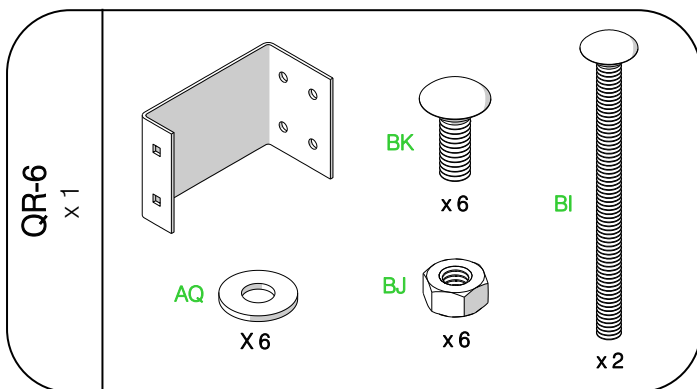x 1

TOOLS REQUIRED:

1/2"
[13mm]

OPEN END WRENCH
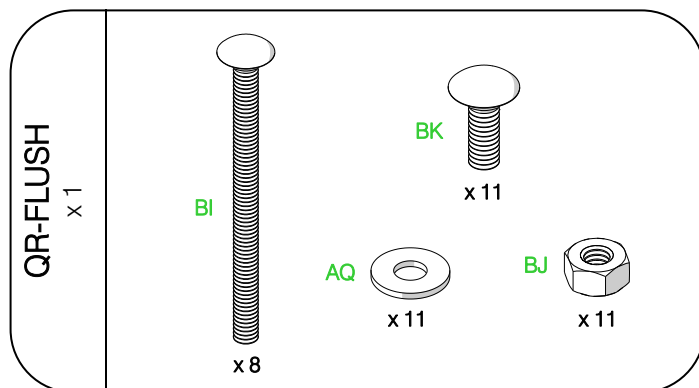
MEASURING TAPE

LEVEL

HARDWARE PROVIDED: QR-FLUSH, QR-4, QR-6, & QR-8

QR-4 x 1

BK
x 6

BI
x 2

AQ
X 6

BJ
x 6

QR-FLUSH x 1

BK
x 11

BI
x 8

AQ
x 11

BJ
x 11

QR-6 x 1

BK
x 6

BI
x 2

AQ
X 6

BJ
x 6

KT004 x 1

BK
x 3

AQ
x 3

BJ
x 3

QR-8 x 1

BK
x 6

BI
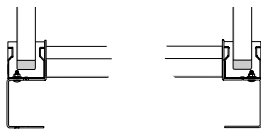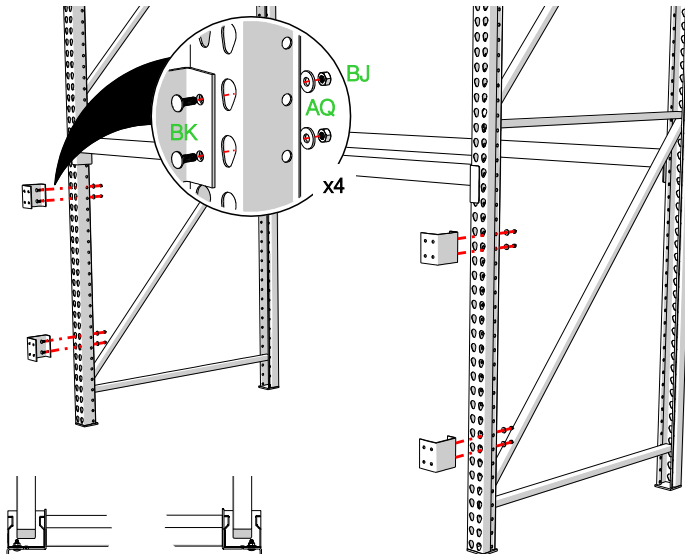x 2

AQ
X 6

BJ
x 6
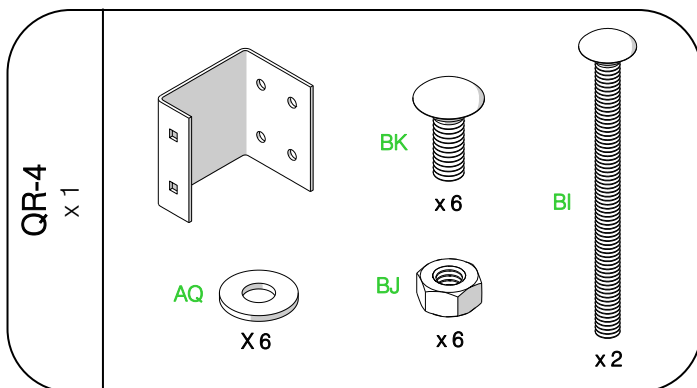
NOTE: IF INSTALLING ON CLOSED 3" UPRIGHTS, REPLACE HARDWARE SHOWN ON STEP 1 WITH 3-1/2" LONG CARRIAGE BOLTS **(BI)** PROVIDED IN ABOVE KITS

HARDWARE LIST:

(BI)   5/16"-18 x 3-1/2" SQUARE NECK CARRIAGE BOLT
(AQ)   5/16" FLAT WASHER
(BJ)   5/16"-18 FLANGE NUT
(BK)   5/16"-18 x 3/4" SQUARE NECK CARRIAGE BOLT
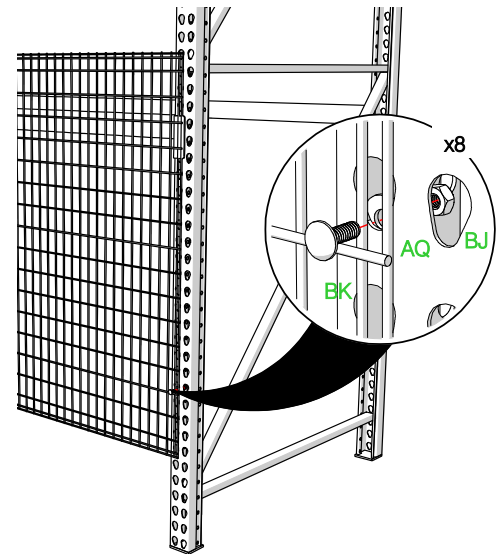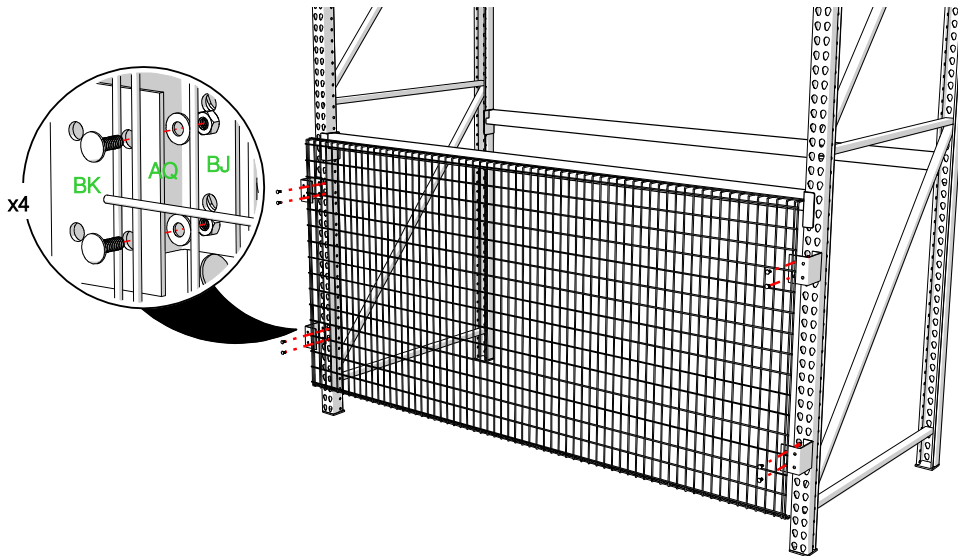
1

OFFSET BRACKET

BJ
AQ
BK

x4

TOP VIEW

NOTE:
INSTALL MOUNTING BRACKETS FLUSH TO
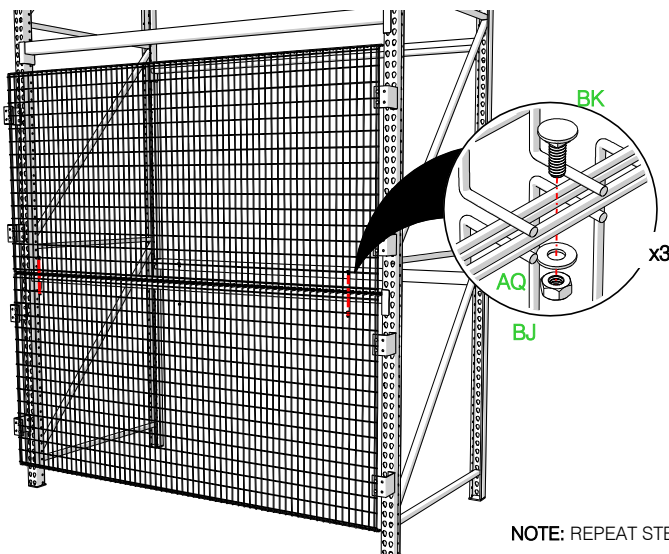THE OUTSIDE OF RACK UPRIGHTS

FLUSH / NO BRACKET

x8

AQ
BJ
BK

2

BK AQ BJ

x4

MULTIPLE BAYS

3

OFFSET BRACKET

BK

AQ
BJ

x3

FLUSH / NO BRACKET

BJ
AQ
AG

x3
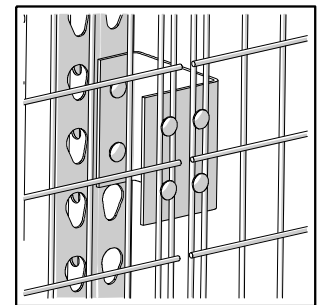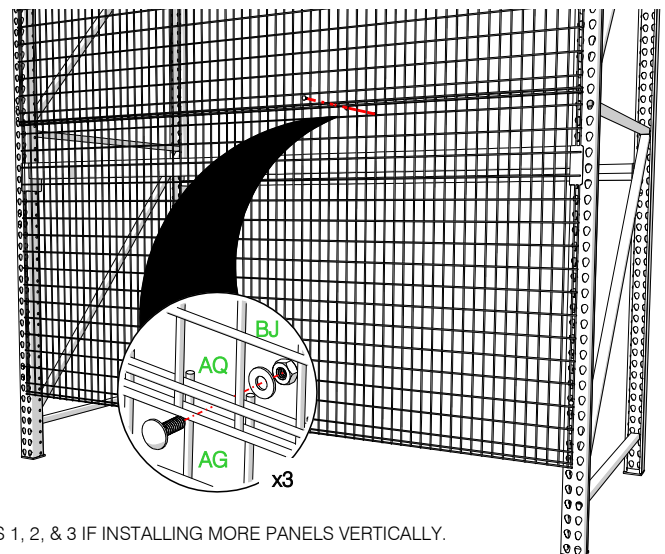
NOTE: REPEAT STEPS 1, 2, & 3 IF INSTALLING MORE PANELS VERTICALLY.

www.FoldingGuard.com